

# Spare parts list series FEDERICA REC

# **Edition 03/2017**



# Spare parts list

#### 1 REPLACEMENT PARTS CATALOGUE

This catalogue includes all the replacement parts required for the maintenance and service of boilers. This edition of the catalogue supersedes all previous editions.

#### **2 MODELS AND SPECIFICATIONS**

Boilers differ in basic characteristics:

### 2.1 Maximum useful heating power during operation as a building heat source

The models are available with a maximum useful heating power when used as a building heat source. Each of these models is identified by its own model number:

Model 24 (24kW), 28 (28kW)

## 3 MODEL IDENTIFICATION CODE/SERIAL NUMBER


Every boiler produced by carries its own model identification code/serial number.

It is important for the service centre to mention this number when contacting the factory (the number must be listed on guarantee claims and service reports; when making requests for technical information, etc.).

The following is a breakdown of the model identification code/serial number and its meaning (reading from left to right):

- A) The maximum useful heating power during operation as a building heat source.
- B) The type of boiler according to its functions
- C) The type of gas used by this boiler. The letter "N" is used for Natural gas; the letter "G" is used for liquefied petroleum gas (LPG).
- D) The first five numbers are the actual serial number.
- E) The last four numbers indicate the month (first two numbers) and the year of construction.

These numbers are used in this catalogue to distinguish between versions of the same model with different modifications.

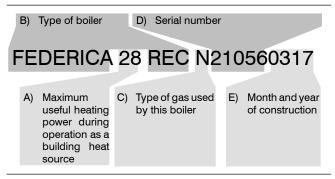

#### 4 REPLACEMENT PARTS CODE

Each currently available replacement part is uniquely identified by its own replacement parts code. The replacement parts code consists of a table code and a position code.

#### 4.1 Table code

The table code is a sequence of letters and numbers which uniquely and clearly identify each table. The table code can be found on the upper right of each table (see 4.3).

A validity chart for the table is located at the bottom of the table. This chart lists the models covered by the table.

FEDERICA 28 REC	

#### 4.2 Position Code

The position code is a number which is used to identify a particular object on the table.

To make identification easier, position codes for kits have a different format from position codes for individual parts.

515	Position code for a kit	Position code for an	125
313	(or assembly)	individual part	123

A label can be found next to the position code. This label is used to provide additional information on the replacement part and makes identification of the part easier:

$$A - Type \ of \ gas$$

$$515_{G20} \qquad 125_{G20} \qquad G20 = \text{Natural gas}$$

$$515_{G30-G31} \qquad 125_{G30-G31} \qquad G30 - G31 = \text{Butane-Propane (LPG)}$$

$$B - Validity \ restrictions$$


$$515_{(24)} \qquad 125_{(24)} \qquad \text{For model FEDERICA 24 REC}$$

$$515_{(28)} \qquad 125_{(28)} \qquad \text{For model FEDERICA 28 REC}$$

#### 4.3 Composition of the replacement part code

Each replacement part code includes a table identification code and a position code. A position code is only listed for replacement parts which are currently available.

The replacement part code consists of the table code (which can be found on the upper right of the table) plus the position code (in two formats: individual part or kit).

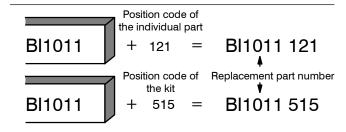

The components of a kit are enclosed in a broken line. A kit may contain other complete kits, or portions of other kits.


In some tables, a replacement part may be identified with an arrow and a complete replacement part code (table code + position code). This means that the part is available, but must be ordered with the code listed. Also, any explanatory notes must be read before ordering.

#### 4.4 Using the replacement parts code


The replacement parts code must be included on all documents which are used in service reports, orders for replacement parts, guarantee claims, etc.

# Spare parts list


Table		Edition	N° of pages
BI1441 Part 1	Water group	0317	1
BI1501 Part 1	Water group	0317	1
BI1562 Part 2	Water group	0317	1
BI1213 Part 3	Gas group	0317	1
BI1955 Part 5	Driving panel and electric parts	0317	1
Bl2235 Part 5	Driving panel and electric parts	0317	1
BI1536 Part 6	External panels, fire chamber	0317	1
BI1913 Part 1	Spares	0317	1

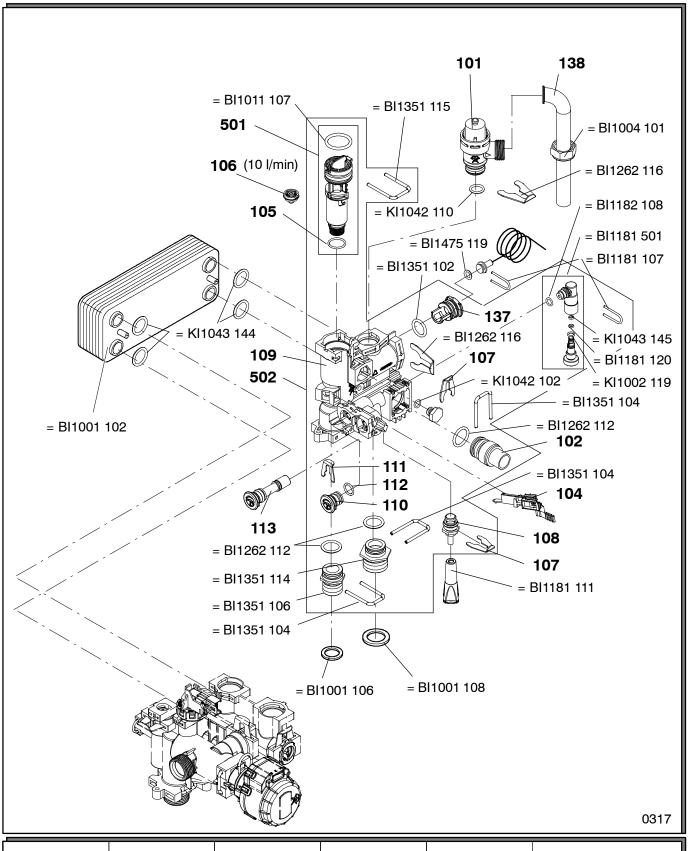


FEDERICA 28 REC		BUGATTI
		BUGATTI

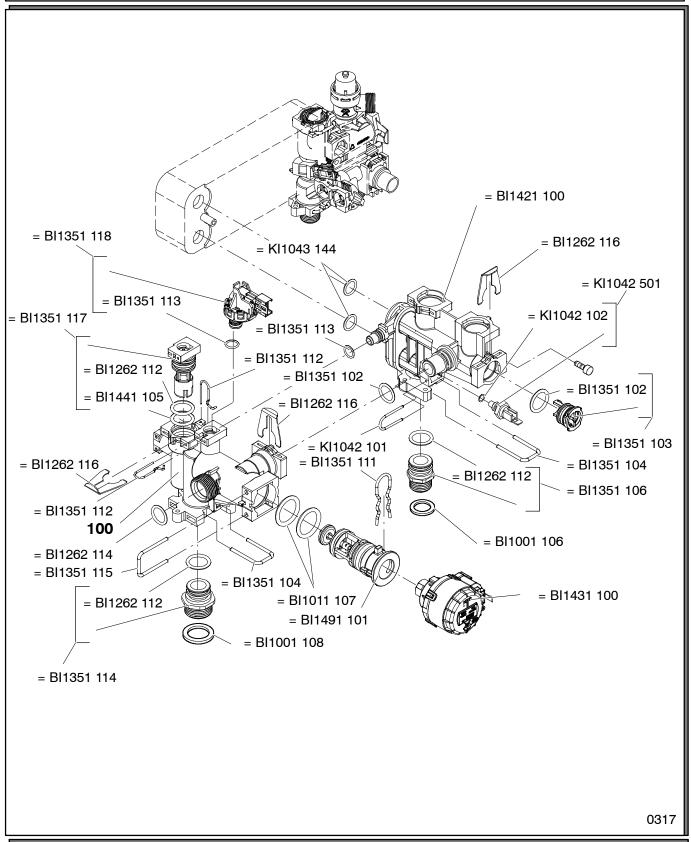


FEDERICA 28 REC		FEDERICA
		BUGATTI

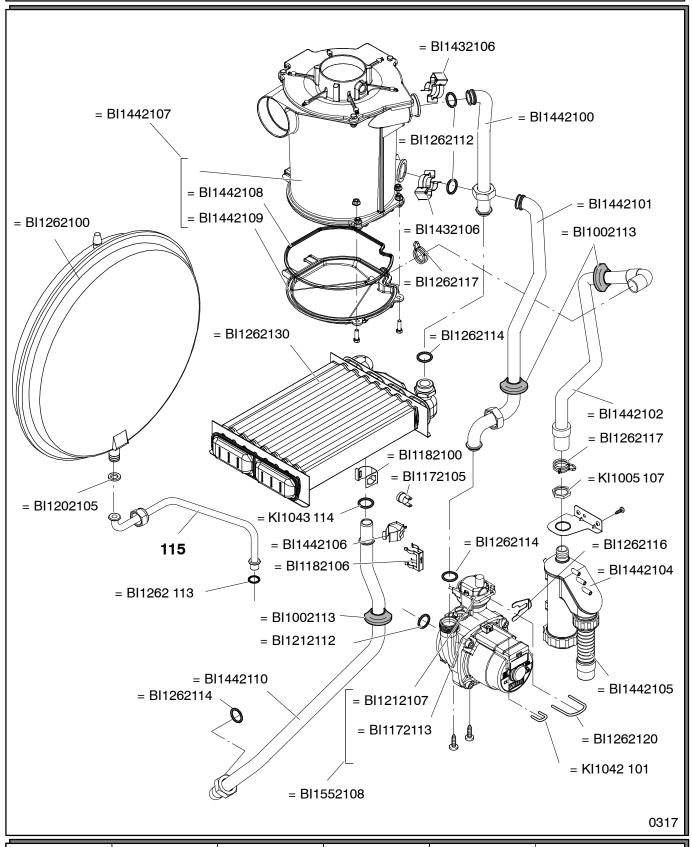

FEDERICA 28 REC		BUGATTI
		BUGATTI

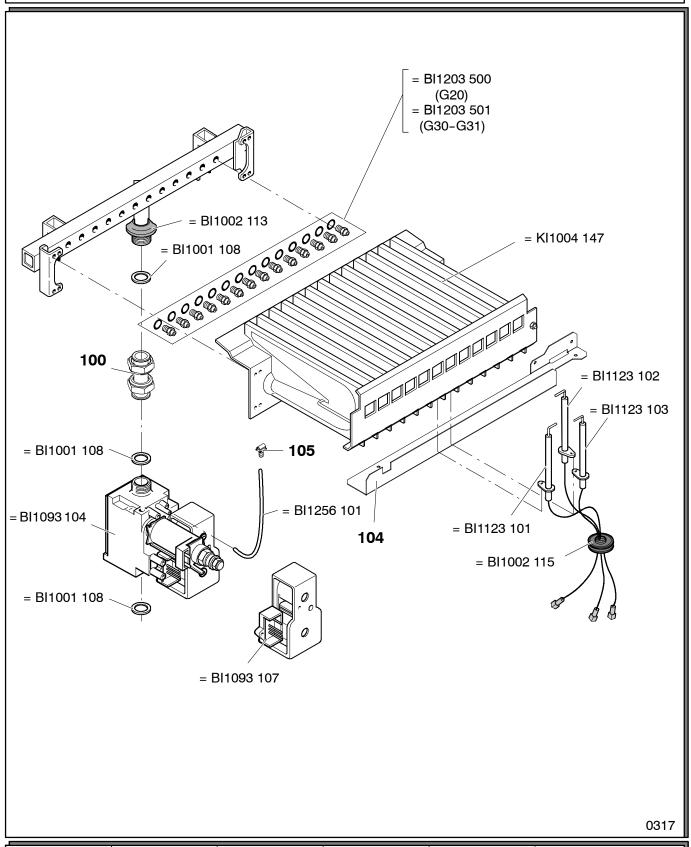


FEDERICA 28 REC		BUGATTI
		BUGATTI

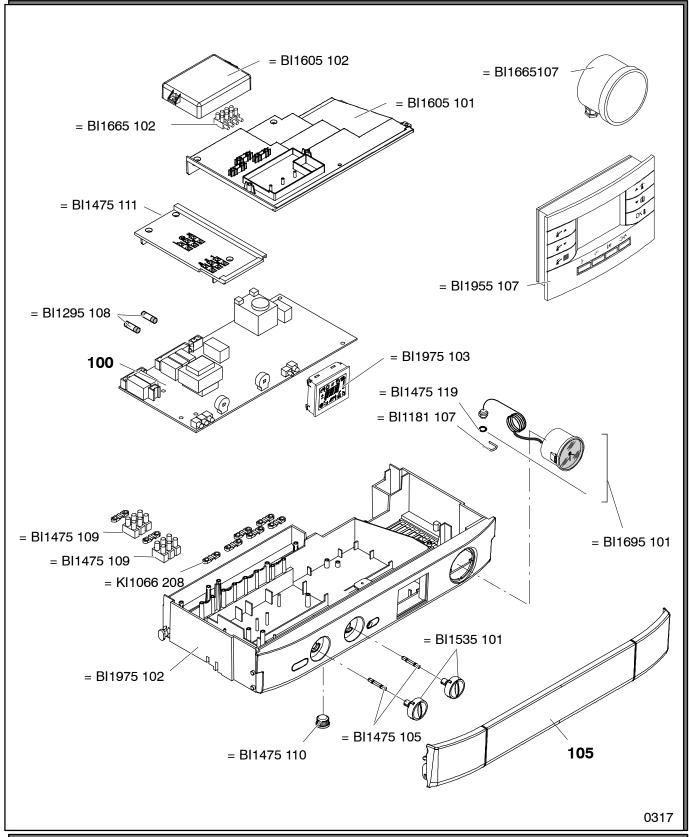

FEDERICA 28 REC		BUGATTI
		BUGATTI

BI2235

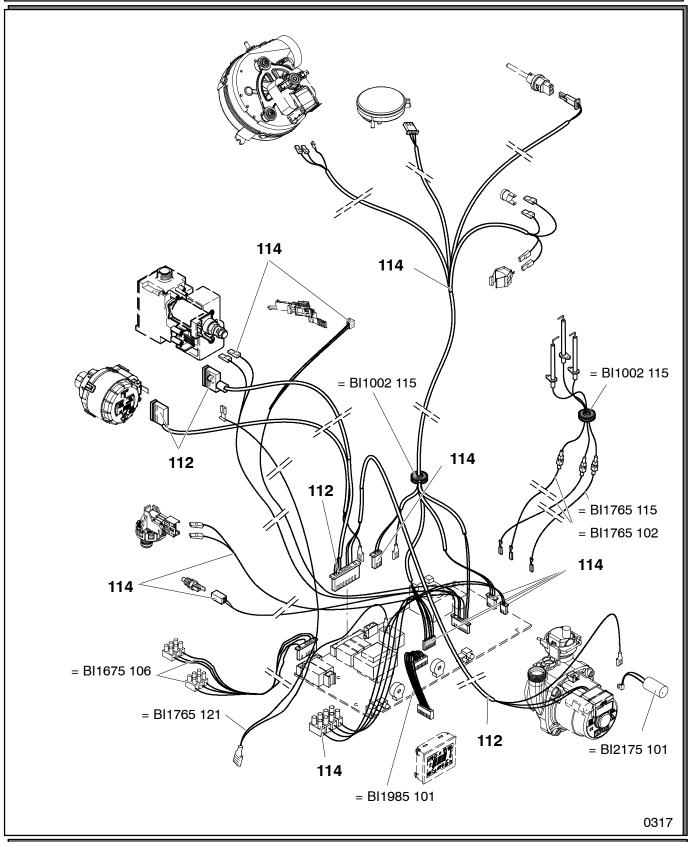

FEDERICA 28 REC		BUGATT
		BUGATT

FEDERICA 28 REC		BUGATTI
		BUGHTTI

= BI1406 105

= BI1206 118


143

0317

= BI1406 500

### Part 1 - Spares

### BI1913

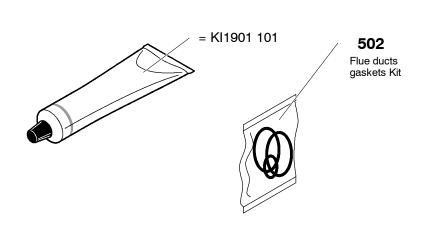

BI1911	800	O-ring packing set		
Part	Pos.	N.	T. Size	
BI1001	115	10	12,42 x 1,78	
KI1043	144	10	18,64 x 3,53	
BI1001	503	10		
KI1043	114	10	17,04x3,53	
KI1001	105	10	17,13x2,62	
BI1475	119	10	7x2	
BI1212	112	10	17,04x4,00	

BI1901	802	Fla	t packing set
Part	Pos.	N.	T. Size
BI1001	107	10	P 1/4"
BI1001	109	10	P 3/8"
BI1202	105	10	P 3/8"
BI1001	106		P 1/2"
BI1001	108	10	P 3/4"
BI1001	105	10	P 1"

0317

			BUGATTI
FEDERICA 28 REC			