




Комплект рециркуляции Madeira Solar KRBS
Recirculation kit for Madeira Solar KRBS boiler
0KRICIRC01

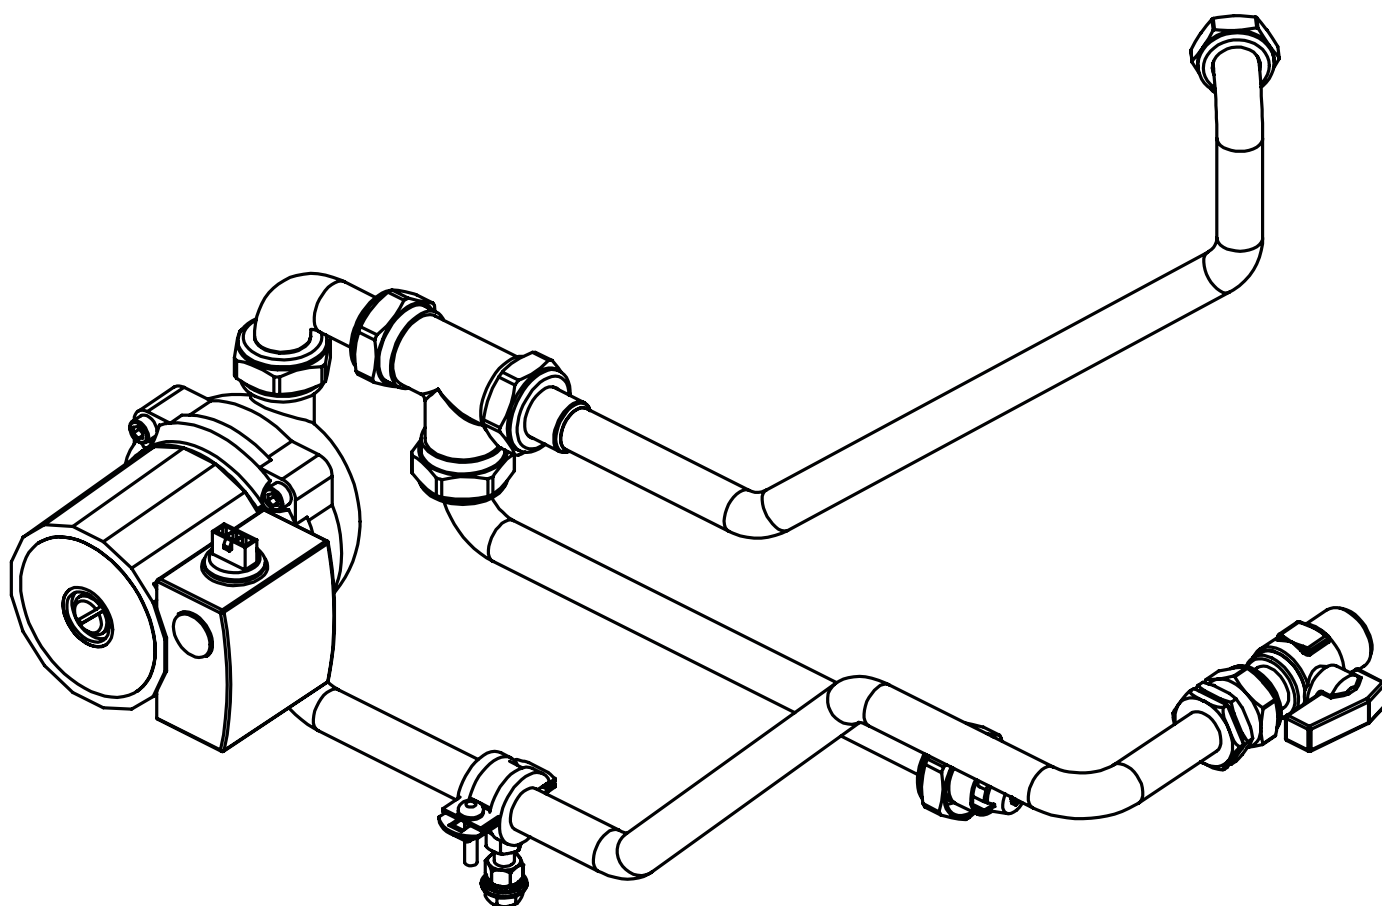

RU - ИНСТРУКЦИЯ ПО УСТАНОВКЕ
EN - INSTALLATION AND MAINTENANCE

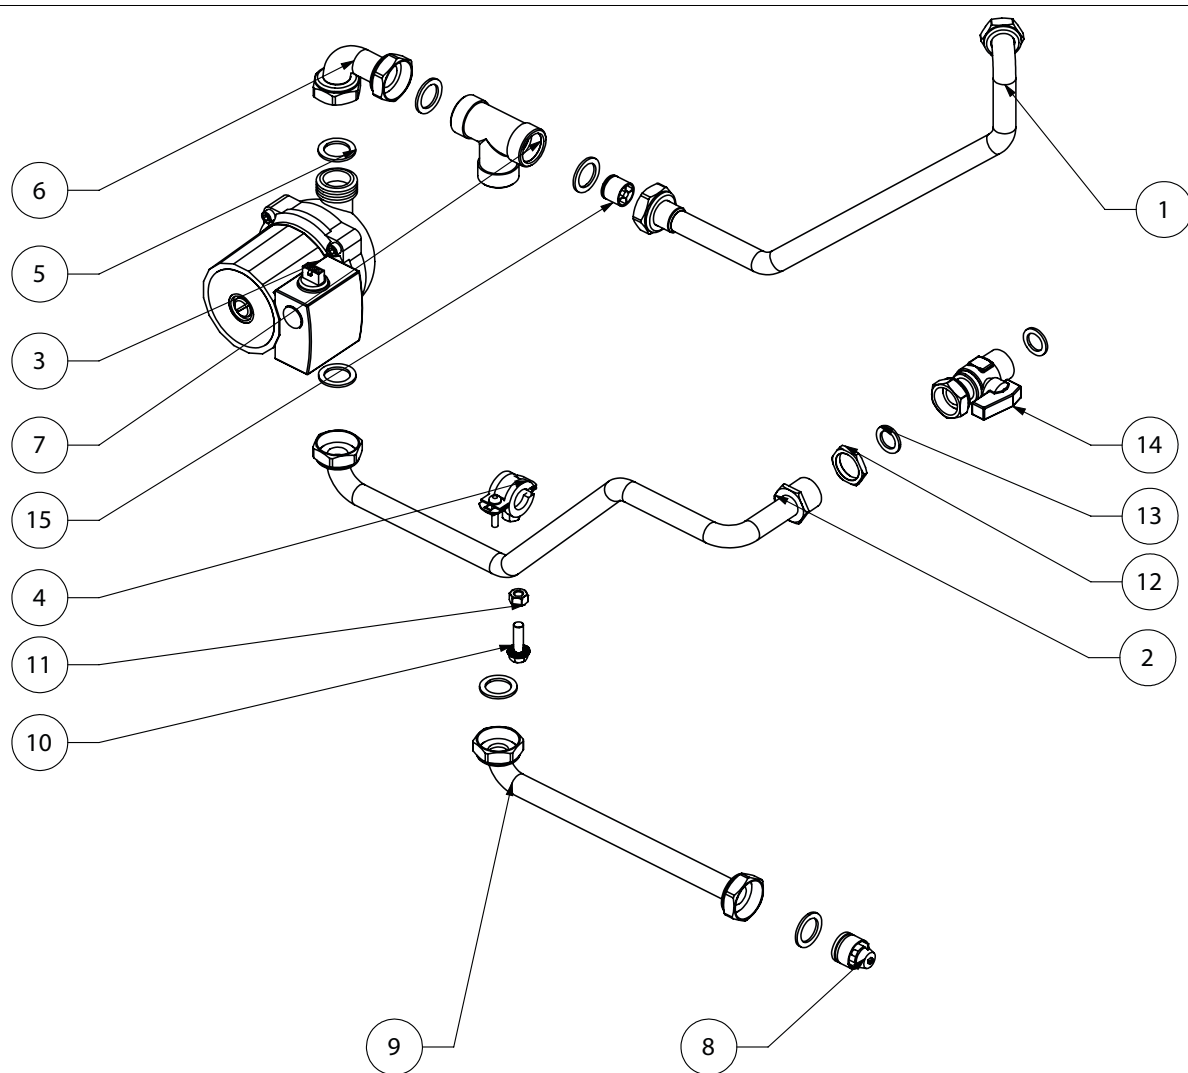


рис. 1

Поз.	Описание	Кол.
1	Трубка рециркуляции бойлера	1
2	Трубка входа рециркуляция - бойлер	1
3	Насос рециркуляции (напор 2 м)	1
4	Хомут	1
5	Прокладка G1	6
6	Отвод для напольного котла	1
7	Т-образное подключение	1
8	Обратный клапан трубки холодная вода - рециркуляция	1
9	Трубка холодная вода - рециркуляция	1
10	Винт TE M8x25	1
11	Гайка M8	1
12	Контргайка 3/4"	1
13	Прокладка G3/4	2
14	Кран G3/4	1
15	Обратный клапан для трубки рециркуляции	1

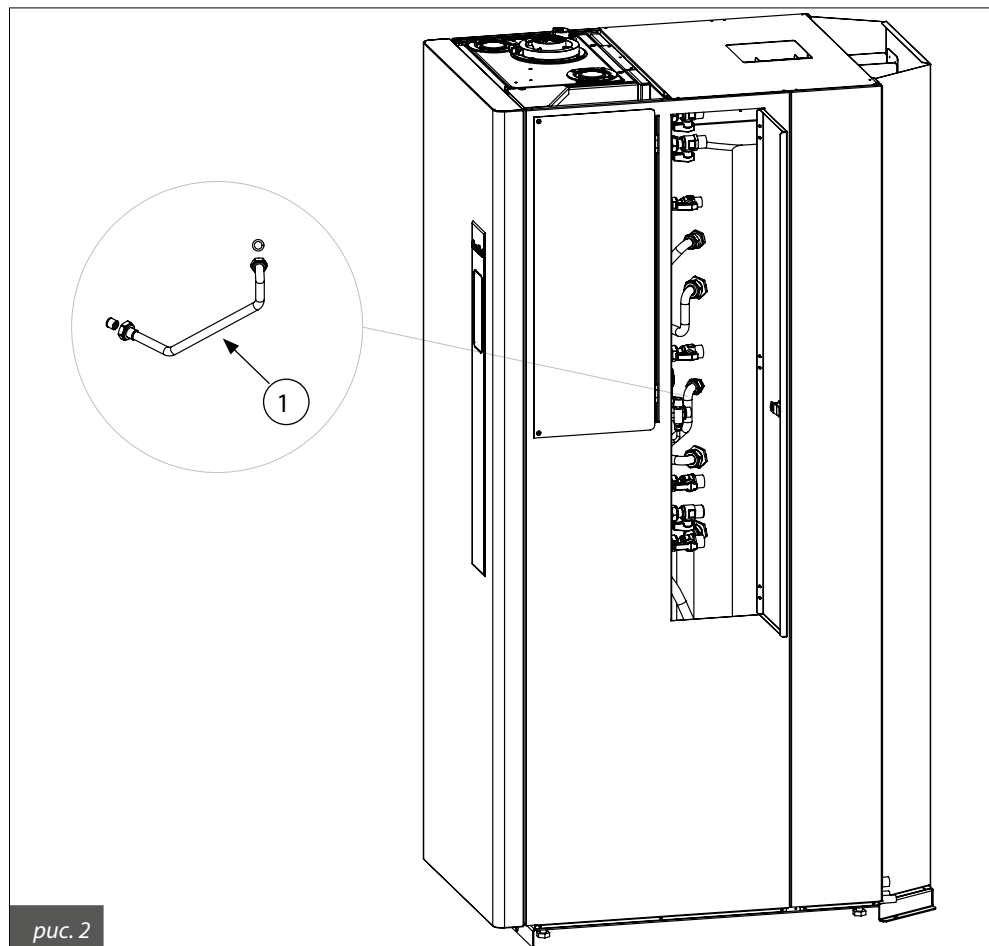


рис. 2

Откройте боковую дверку в правой части котла.
Подключите трубку рециркуляции бойлера (1) ко входу рециркуляции котла, как показано на рисунке, плотно затяните гайку используя присутствующую прокладку.



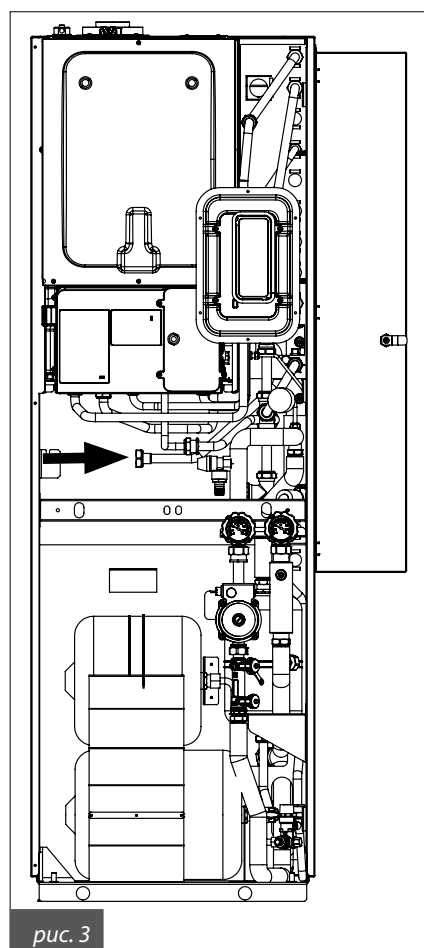


рис. 3


Установите на другой конец трубки рециркуляции бойлера (1) обратный клапан для трубки рециркуляции (15), как показано на рисунке, обратите внимание на тип клапана.

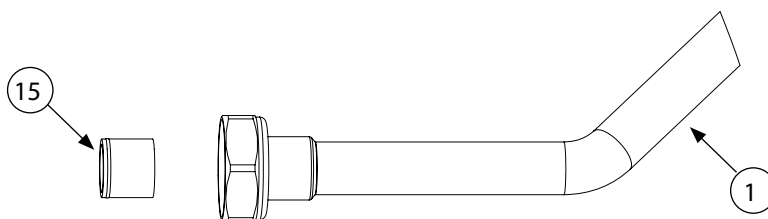

ВНИМАНИЕ
Используйте корректный обратный клапан (15).

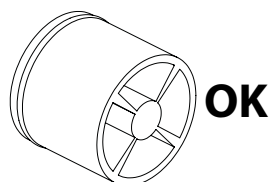

Обратный клапан для
трубки рециркуляции (15)

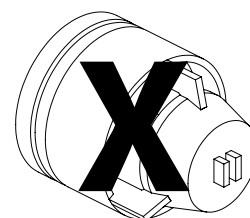

Обратный клапан для
трубки холодная вода
рециркуляция (8)

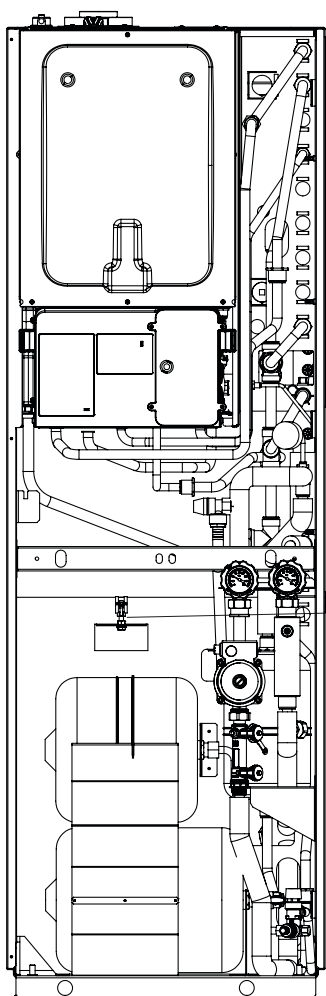


рис. 4

Используя винт (10) и гайку (11), зафиксируйте хомут (4) в отверстии в передней части котла, таким образом, чтобы хомут был развернут на 90 градусов. Плотнo затяните крепление с помощью инструмента.

Подключите трубку входа рециркуляции - бойлер (2) через хомут к отверстию предусмотренному в раме котла, как показано на рисунке ниже. Для фиксации используйте контргайку 3/4" (12).



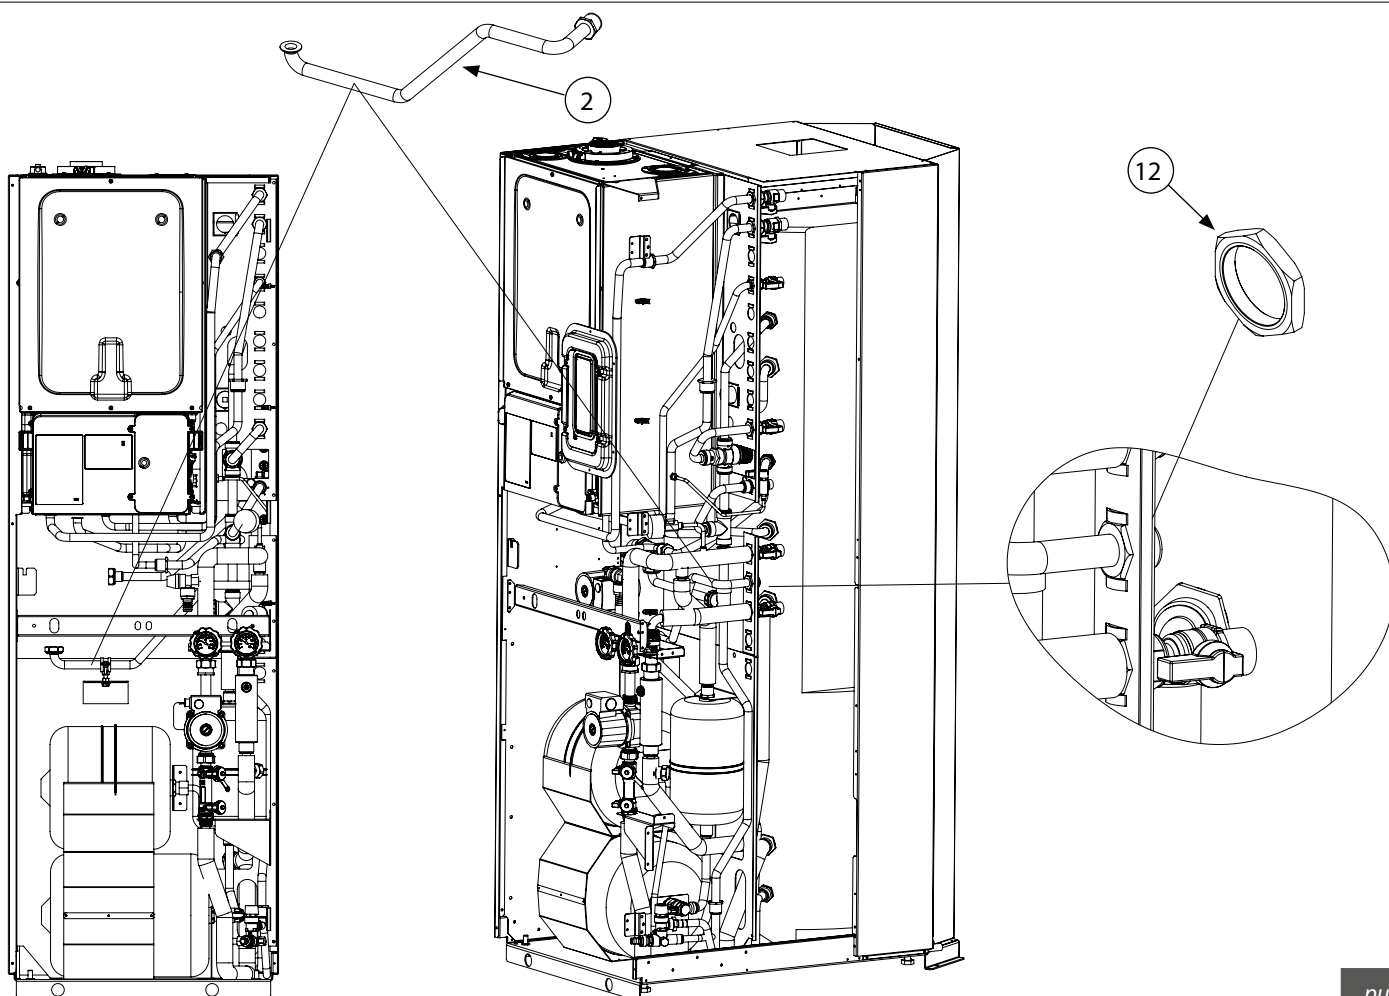


рис. 5

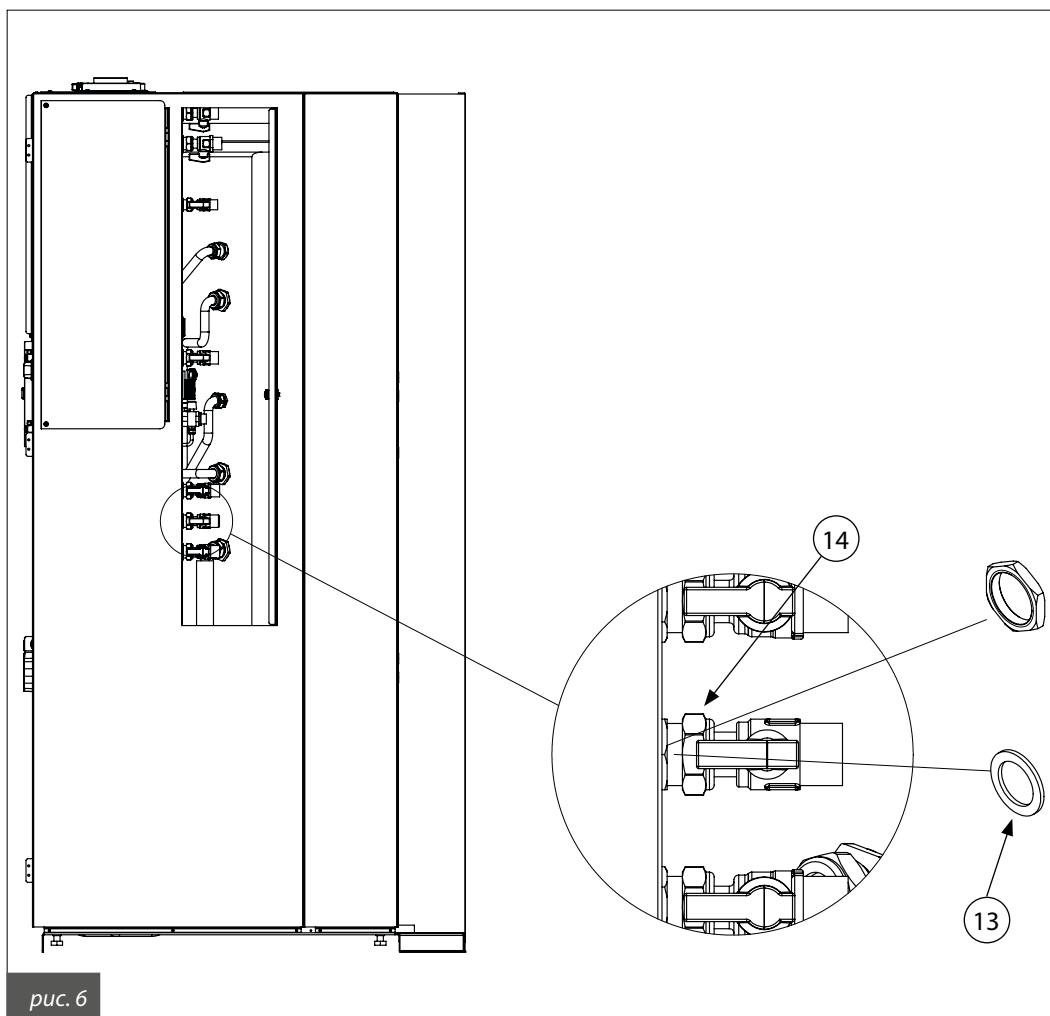

Установите на трубку входя рециркуляции - бойлер (2) кран G3/4 (14), используя прокладку 3/4" (13).



рис. 6

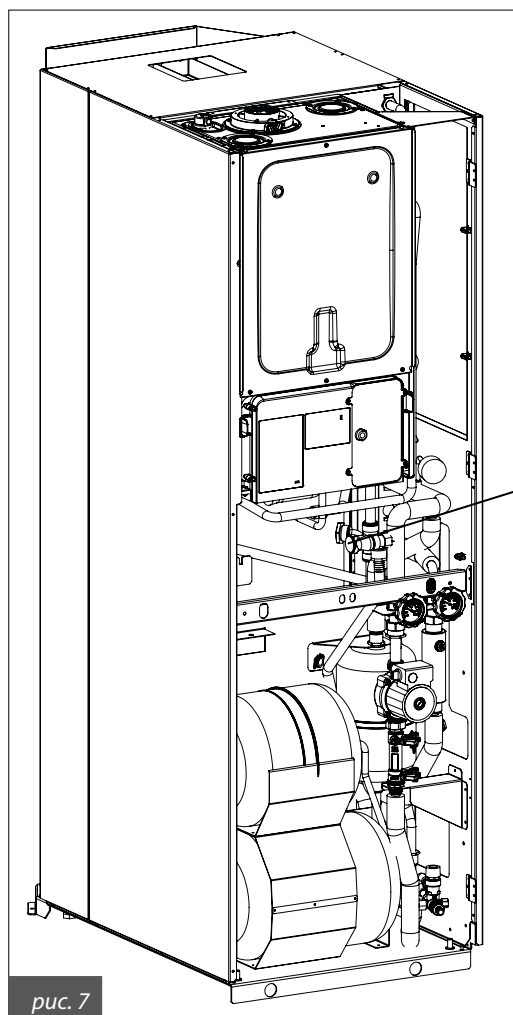


Удалите заглушку на Т-образном тройнике, как показано на рисунке и установите обратный клапан для трубки холодной воды - рециркуляции (8), обратите внимание на тип клапана.

ВНИМАНИЕ

Используйте правильный обратный клапан (8).

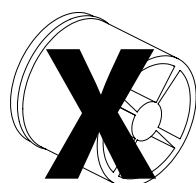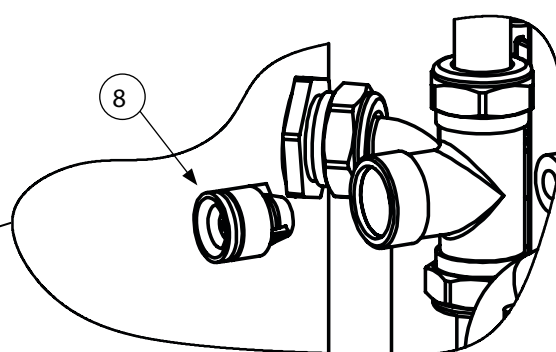

Обратный клапан трубки рециркуляции бойлера (15)

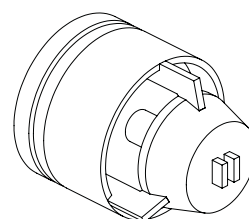

Обратный клапан трубки холодная вода-рециркуляция бойлера (8)

рис. 7


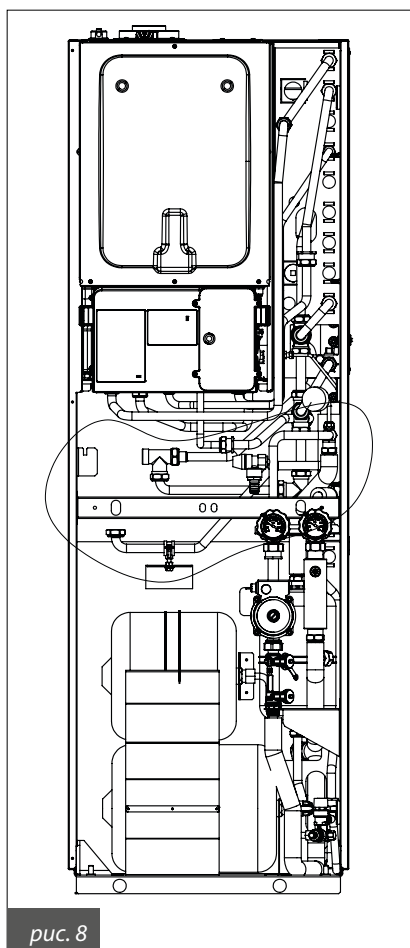


рис. 8

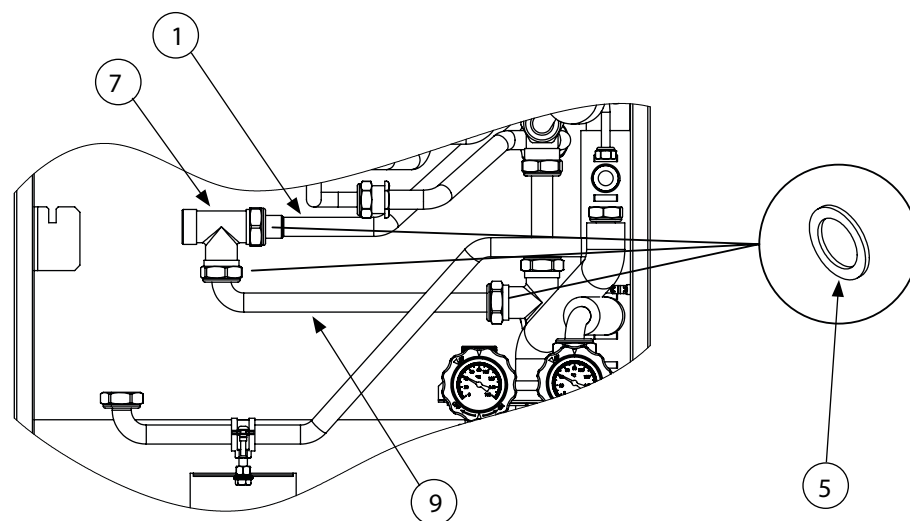

На Т-образный тройник с обратным клапаном подключите трубку холодная вода-рециркуляция (9) используя прокладку G1 (5).

Подключите Т-образный тройник (7) между трубкой холодной воды - рециркуляцией (9) и трубкой рециркуляции бойлера (1), используя прокладки G1 (5).


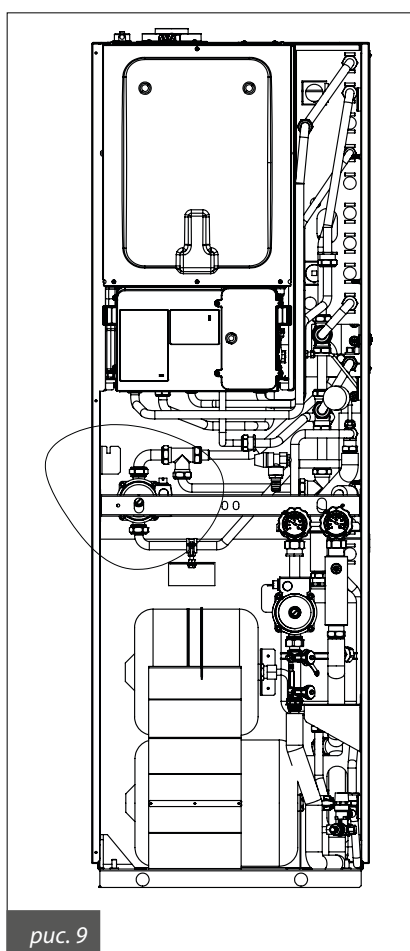


рис. 9

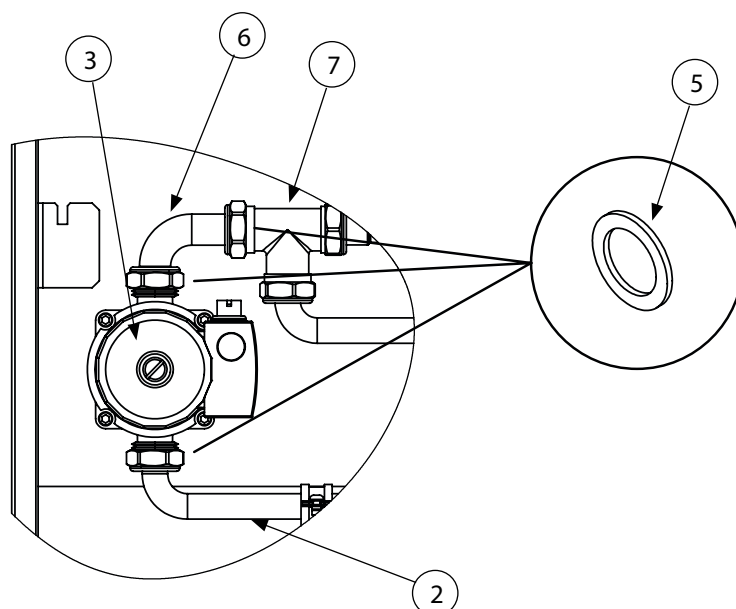

Установите насос рециркуляции (3) между Т-образным подключением (7) и трубкой входа рециркуляции - бойлер (2), используйте отвод для напольного котла (6), как показано на рисунке. Используйте 3 прокладки G1 (5).

ВНИМАНИЕ

Насос рециркуляции (3) должен быть установлен с коннектором подключения обращенным вверх.


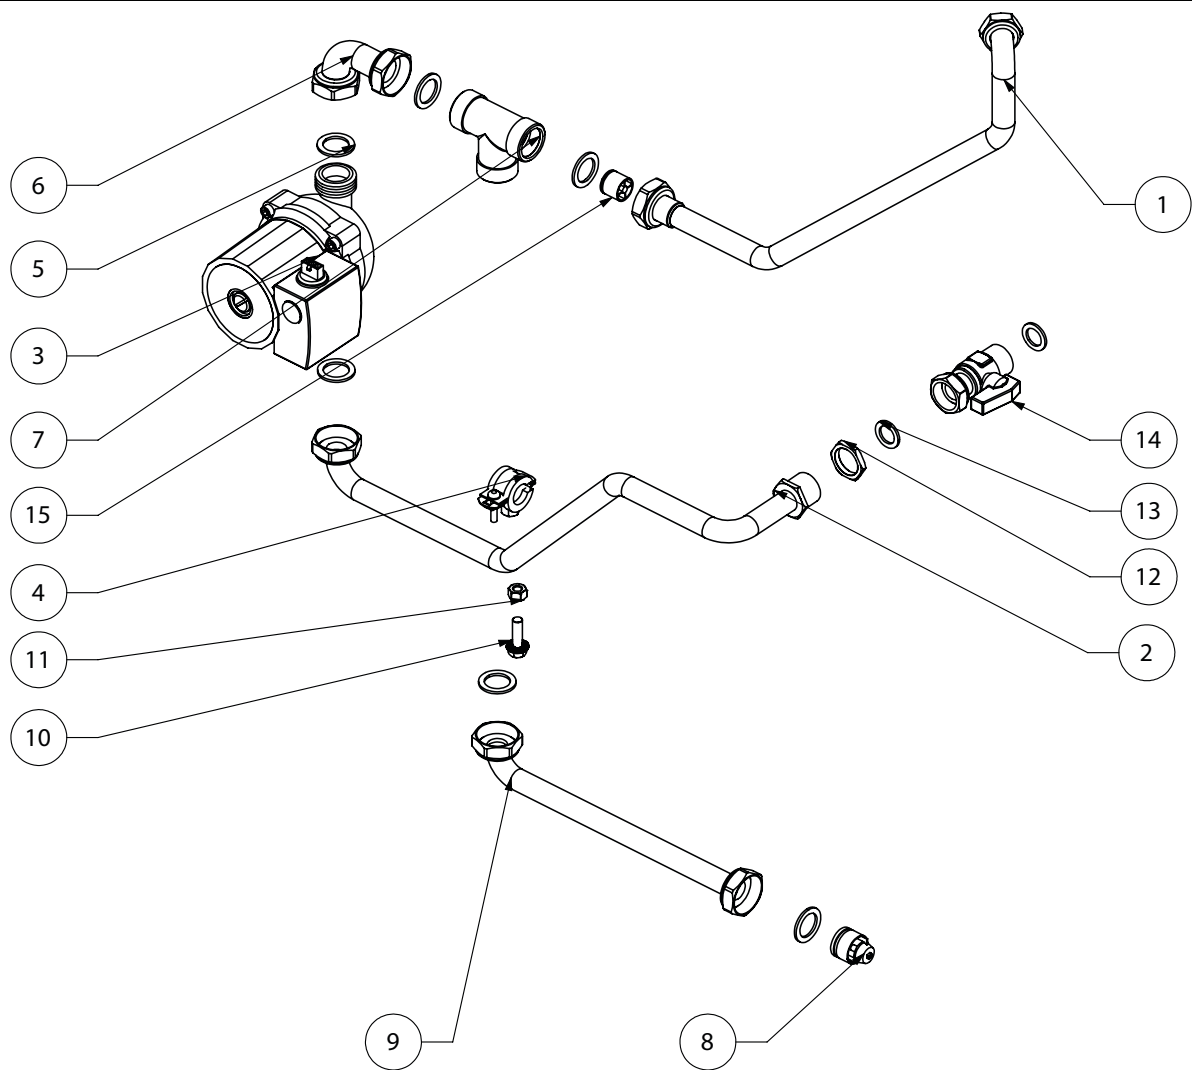



fig. 1

Pos.	Description	Q.ty
1	Water heater recirculation pipe	1
2	Recirculation inlet pipe - water heater	1
3	Recirculation pump (available head 2m)	1
4	Pipe clip	1
5	Gasket G1	6
6	Elbow for floor-standing boiler	1
7	T-shaped fitting	1
8	Non-return valve for cold water pipe - water heater recirculation	1
9	Cold water pipe - water heater recirculation	1
10	TE screw M8x25	1
11	M8 nut	1
12	3/4" ring nut	1
13	G3/4 gasket	2
14	G3/4 cock	1
15	Non-return valve for water heater recirculation pipe	1

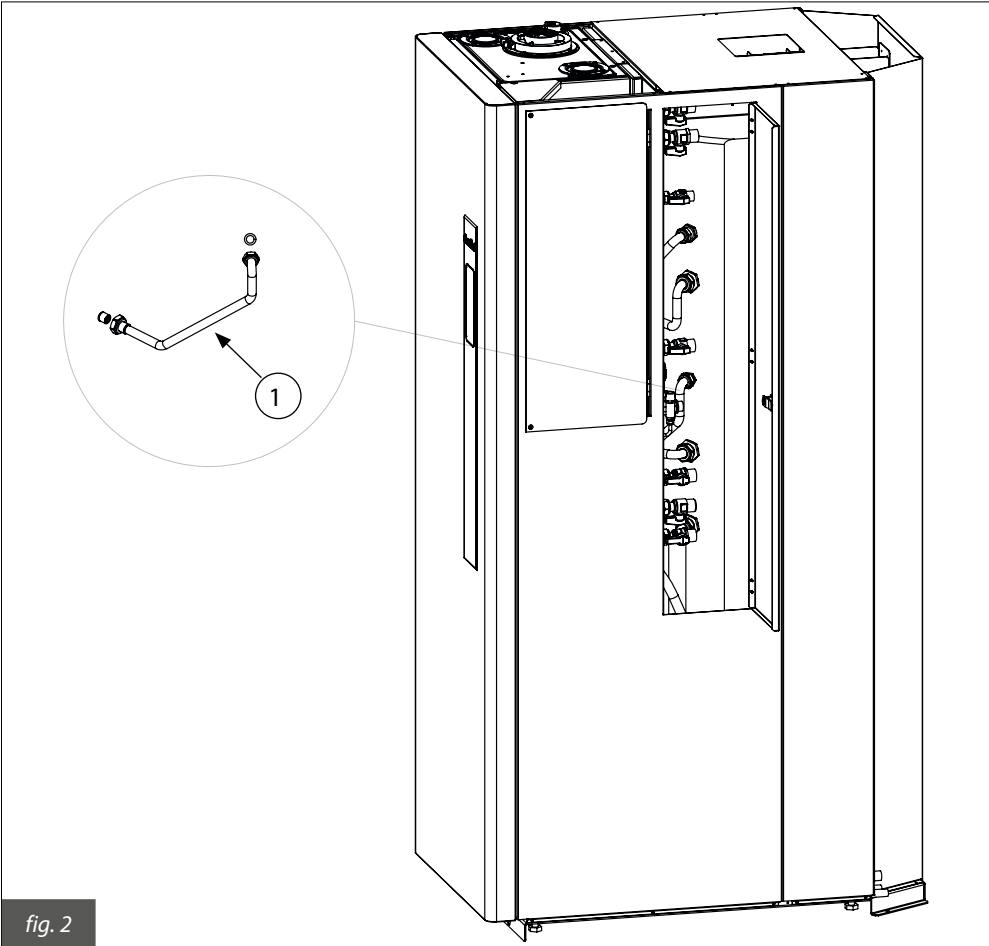


Open the RH door of the boiler. Connect the water heater recirculation pipe (1) to the recirculation inlet of the water heater as shown in the figure, after removing the blanking cap. Use again the gasket present on the recirculation inlet.


fig. 2

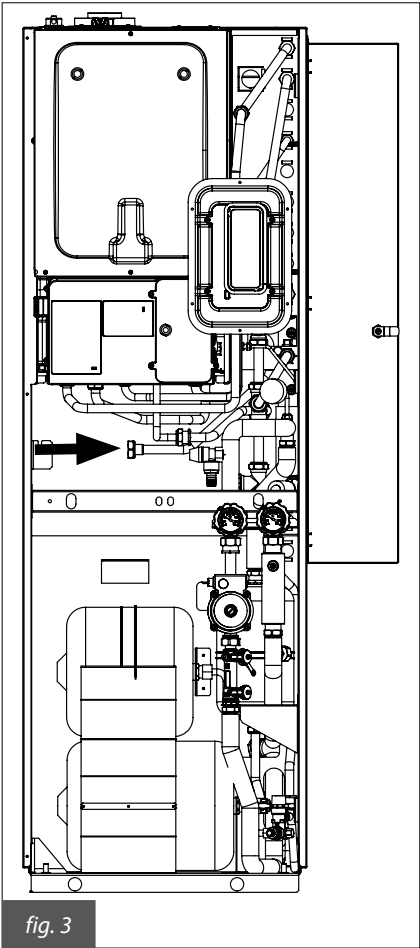


Insert at the opposite end of the water heater recirculation pipe (1) the non-return valve for water heater recirculation pipe (15) as shown in the figure, paying attention to the direction of the valve.

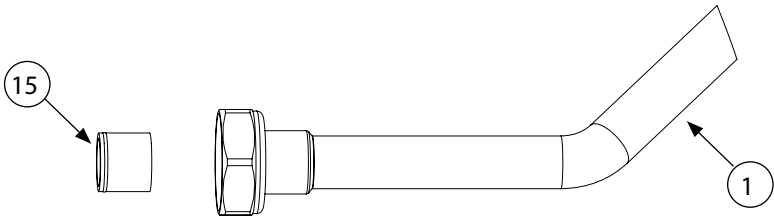

WARNING
Use the correct non-return valve (15).

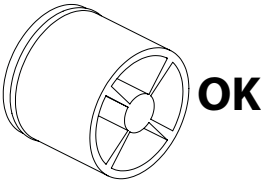

Non-return valve for water
heater recirculation pipe
(15)

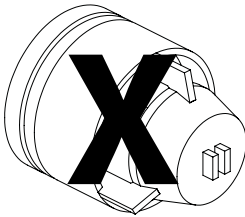

Non-return valve for cold
water pipe - water heater
recirculation (8)

fig. 3

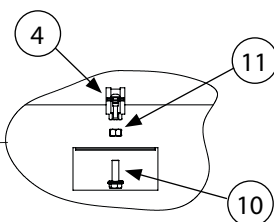
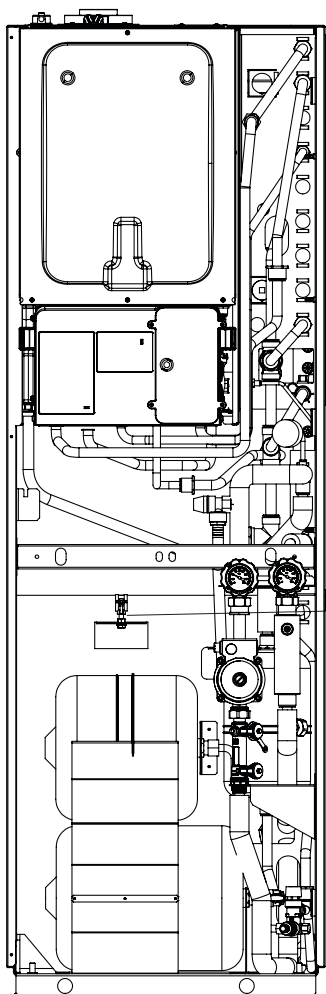


fig. 4

Using screw (10) and nut (11), fix the pipe clip (4) to the appropriate bracket in the frontal part of the boiler.
If the bracket is not in a 90° position, turn it using a tool.

Connect the water heater recirculation inlet pipe (2) between the pipe clip (4) and the connection provided on boiler's rear side, as shown in the figure below.
Use a 3/4" ring nut (12) to fit the pipe on the rear side.

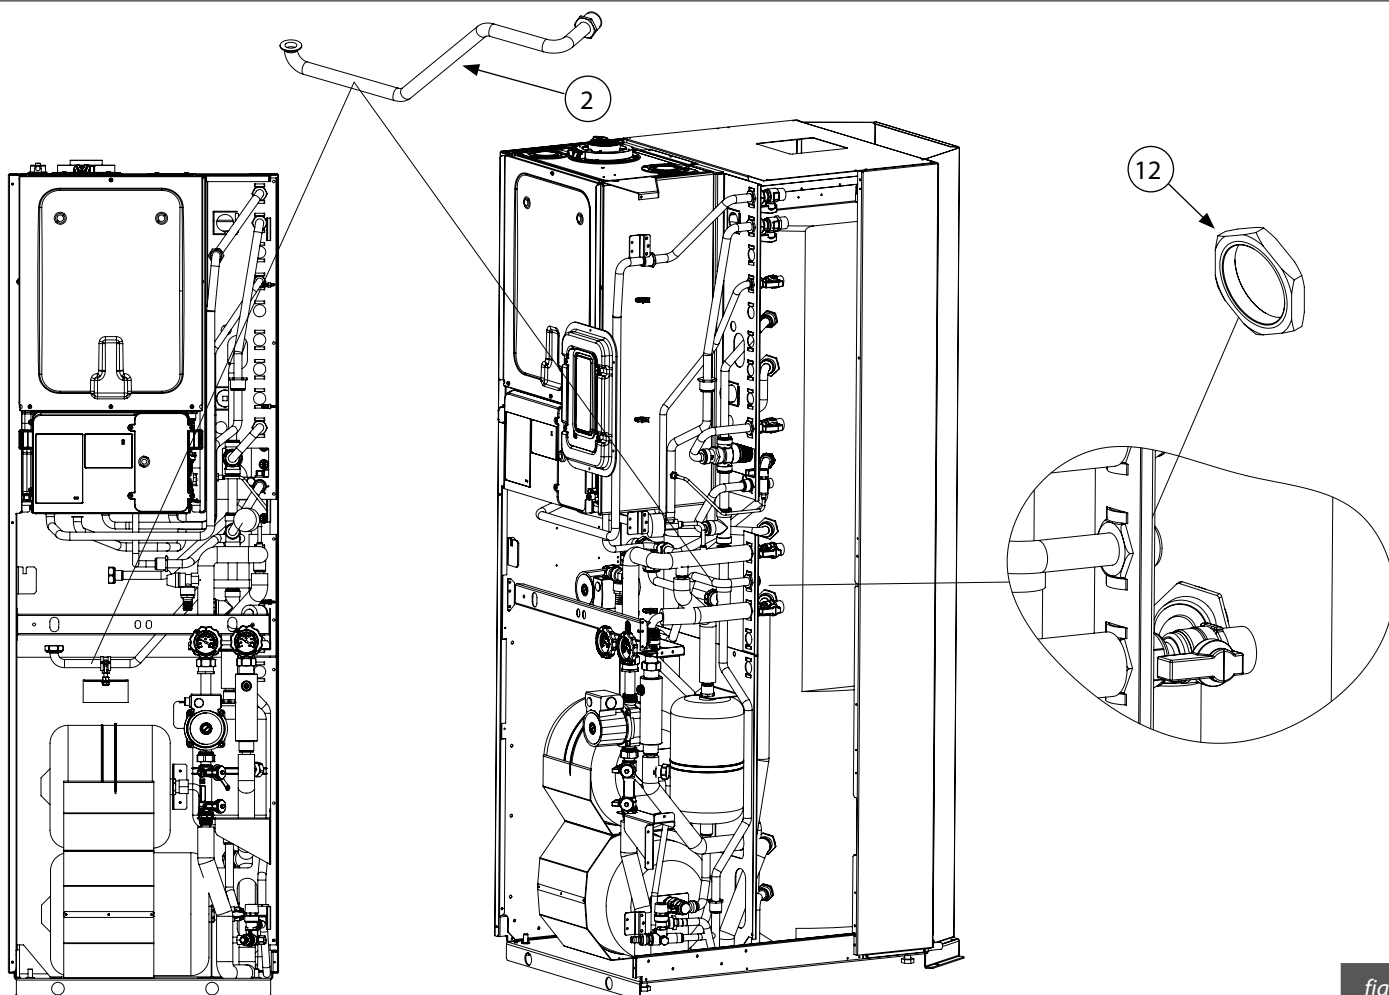


fig. 5

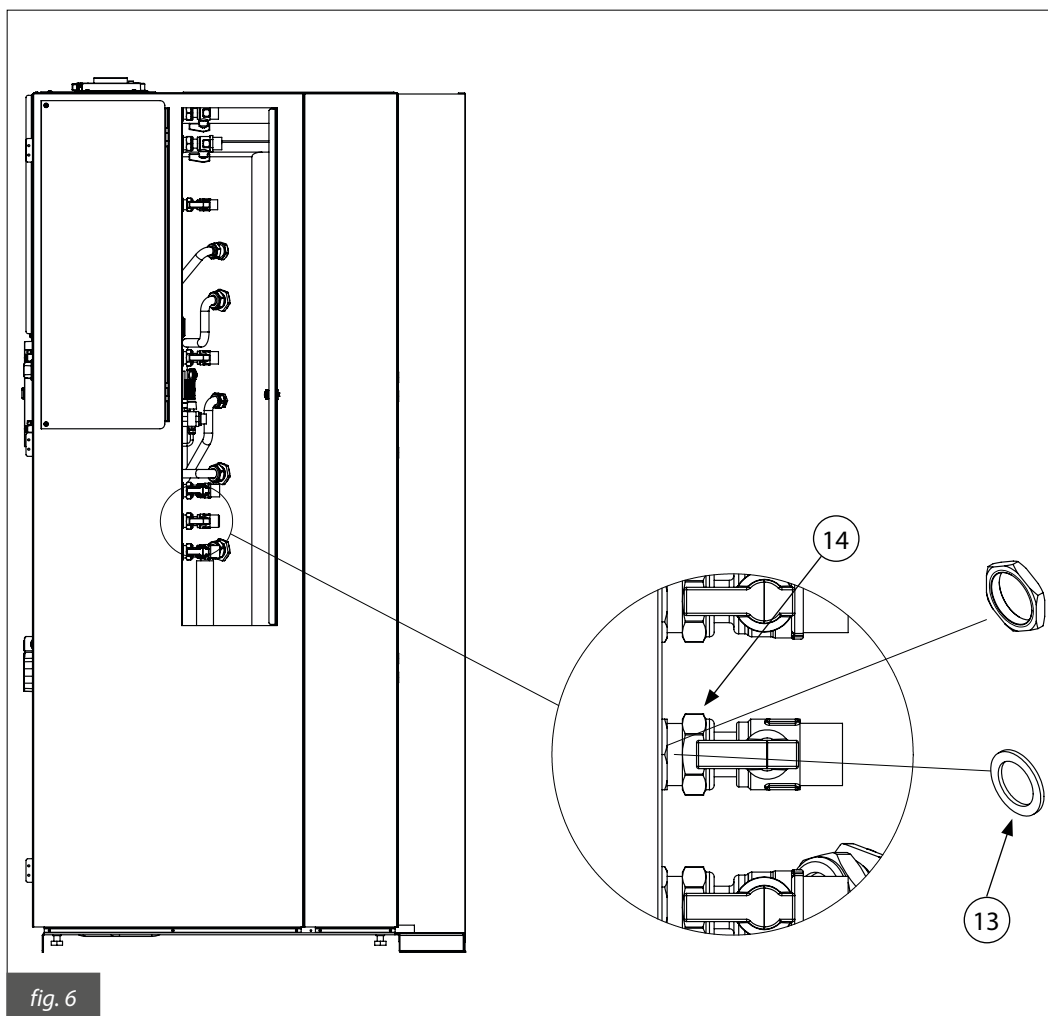


fig. 6


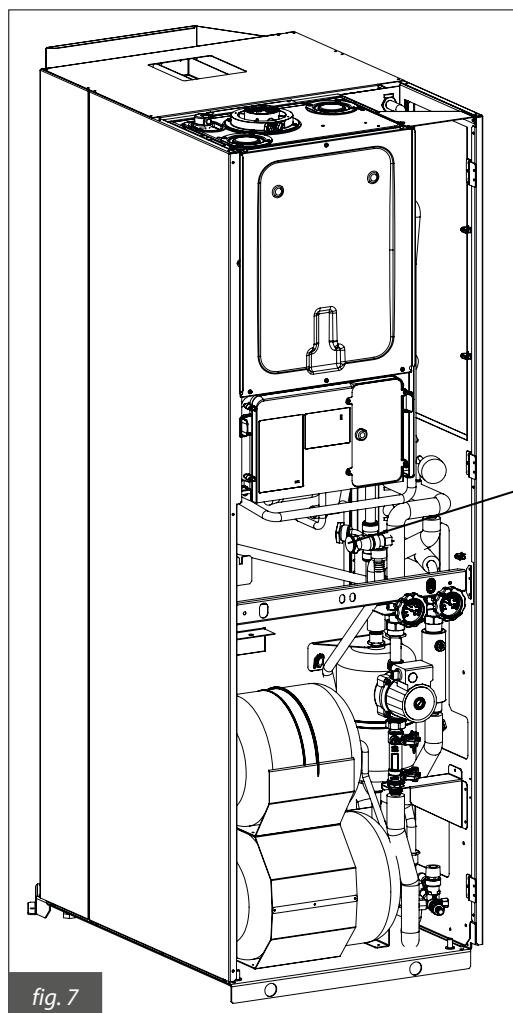


fig. 7


Remove the blanking cap of the T-shaped fitting indicated in the figure and insert the non-return valve for cold water pipe for water heater recirculation (8), paying attention to the direction of the valve.

WARNING

Use the correct non-return valve (8).

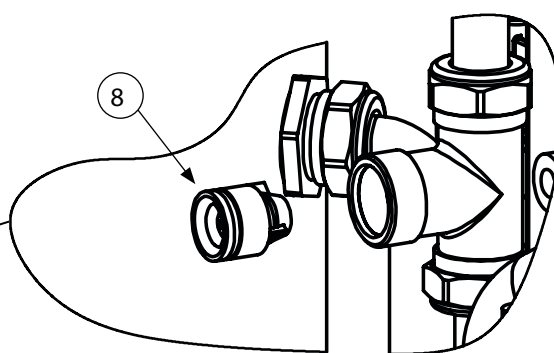

Non-return valve for water heater recirculation pipe (15)

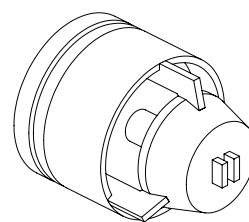

Non-return valve for cold water pipe - water heater recirculation (8)

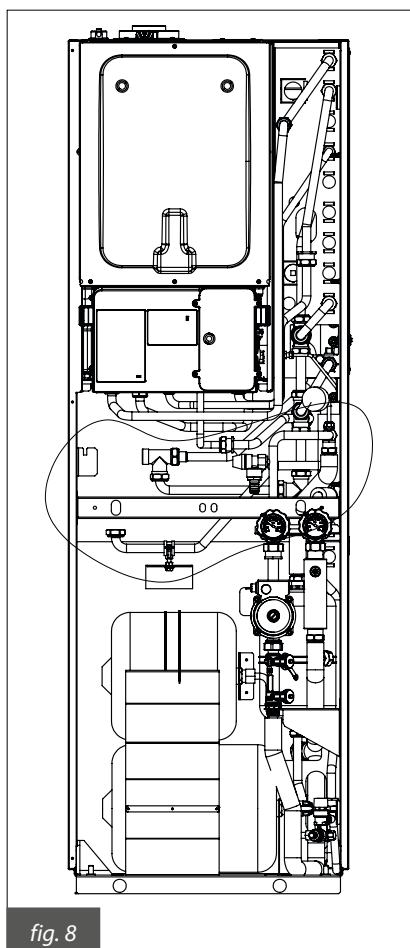


fig. 8

Using a G1 gasket (5) connect the cold water pipe for water heater recirculation (9) to the T-shaped fitting you just assembled.

Using two G1 gaskets (5), connect the T-shaped fitting (7) between the cold water pipe for water heater recirculation (9) and the water heater recirculation pipe (1).

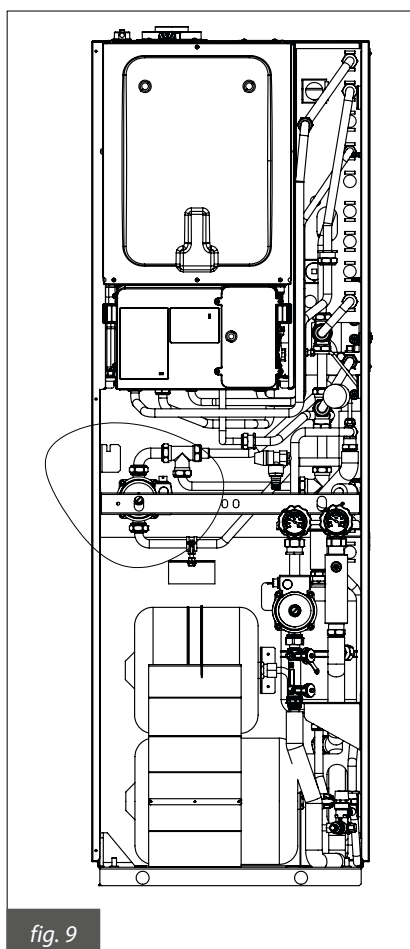
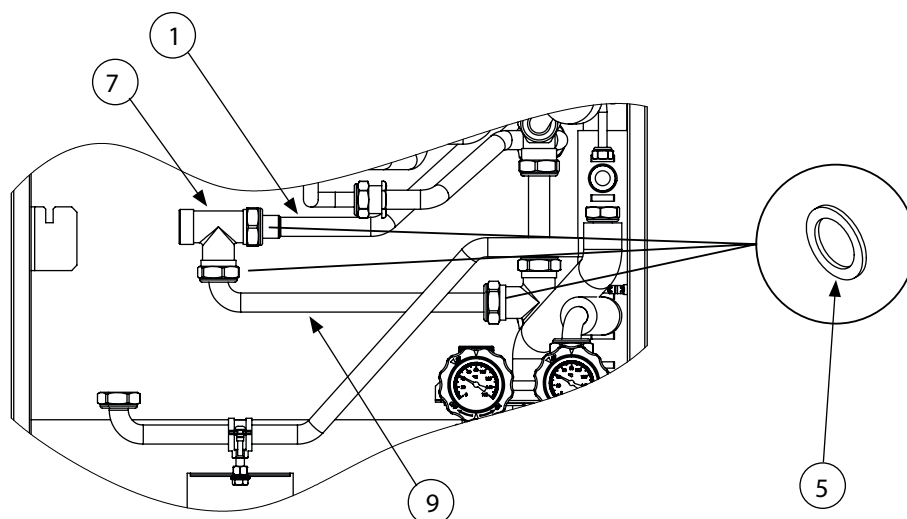



fig. 9

Install the recirculation pump (3) between the T-shaped fitting (7) and the water heater recirculation inlet pipe (2) using the elbow for floor-standing boilers (6), as shown in the figure.

Use 3 G1 gaskets (5).

WARNING

Recirculation pump (3) must be installed with the electrical connector facing upwards.

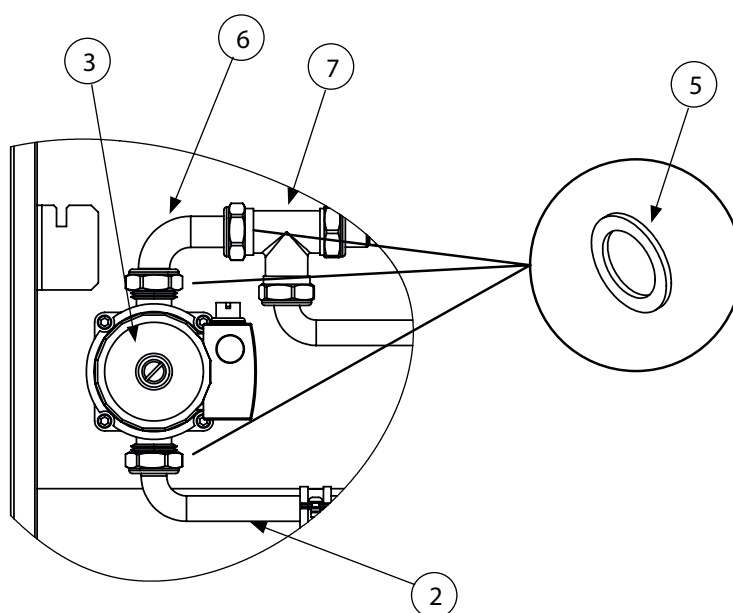



OLIBKIIT43

Fondital S.p.A.
Via CERRETO, 40 - 25079 VOBARNO (Brescia) - Italy
Tel. (+39) 0365 878.31 - Fax (+39) 0365 878.304
e-mail: info@fondital.it - web: www.fondital.com

Uff. Pubblicità Fondital IST 03 C 690 - 02 Dicembre 2014 (12/2014)